




Weight loading and spanning guide

Refer to below graph for approximate acceptable loads and maximum spans when using the Slotted Steel Angles.

Please note these figures refer to supported spans only, i.e. they are cube like designs
Horizontal spans must be supported and not just reliant on the joiner plate.

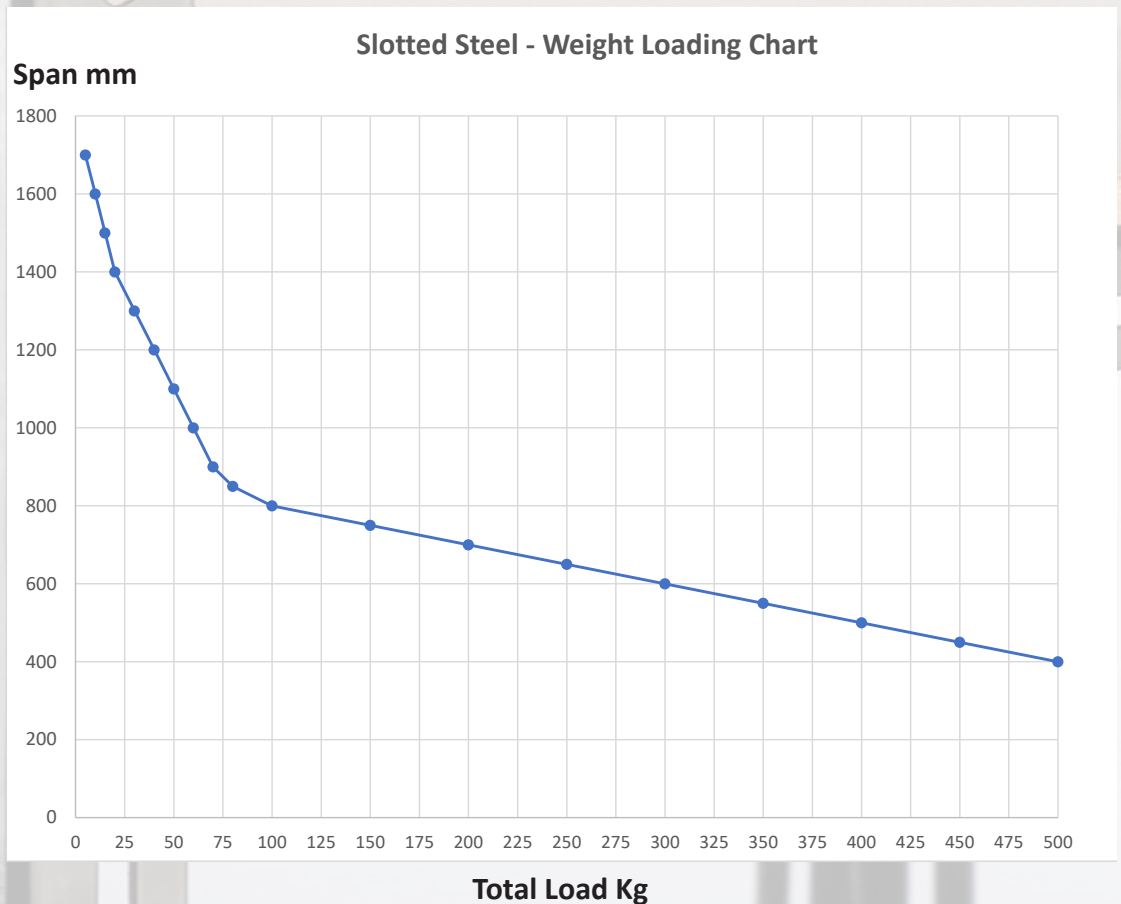

RCR INTERNATIONAL PTY LTD

ABN: 21 089 270 360 PO Box 148, Braeside VIC 3194 Tel: (03) 9558 2020 Fax: (03) 9558 3030

Email: service@rcr.com.au www.rcr.com.au www.metalmate.com.au